
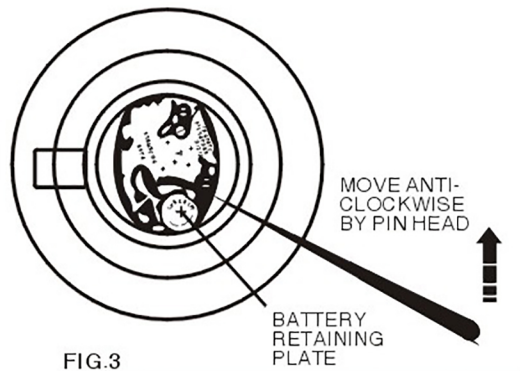
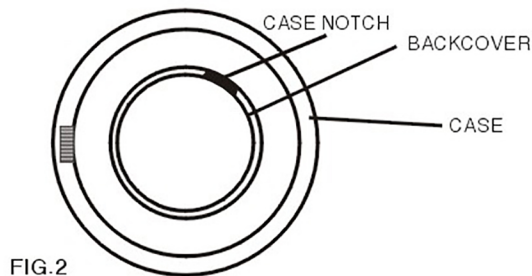


MINI QUARTZ CLOCK USER INSTRUCTION

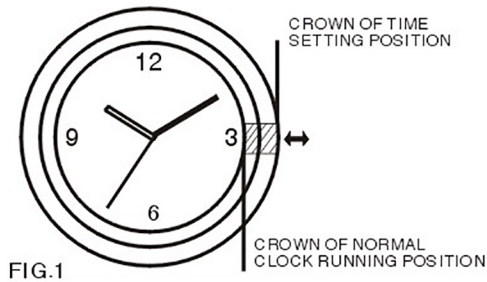

1. TIME SETTING:

The time setting crown is located behind the bezel at the position of 3 o'clock. (If it comes with a rubber ring, remove the rubber 'bellows' ring to expose the crown.) To set time push out crown and turn it until the hands show the current time. Push crown back in the normal position to restart clock. (see Fig. 1) Replace rubber ring marking sure that the notch on it aligns with the crown. (Note: Your clock may come with a tiny plastic fork acting as a spacer to keep the crown at a pushed out position. This fork stops the clock from running thus conserves battery power. To activate clock, pull out the fork before doing the time setting procedure as described above.)

2. BATTERY REPLACEMENT:

It's due for battery replacement when the clock loses time or stops. The battery is accessible from the backside of the clock. Insert a screw driver or a blade into the case notch at the side of the backcover (see Fig.2) and prise open the back cover. The battery is retained in position by a tiny metal plate. Move the plate sideways to remove battery. (Fig.3) Replace with SR626SW button cell with positive pole(+) facing outwards marking sure that it is retained securely in position by the metal plate. Replace back cover.

3. BATTERY TYPE:

The original battery life is about one year.
Battery type: SR626SW, UCC 377, Ray-O-Vac, RW329 or equivalent.